M-750V

SERVICE MANUAL

US Model
Canadian Model
AEP Model
UK Model
E Model

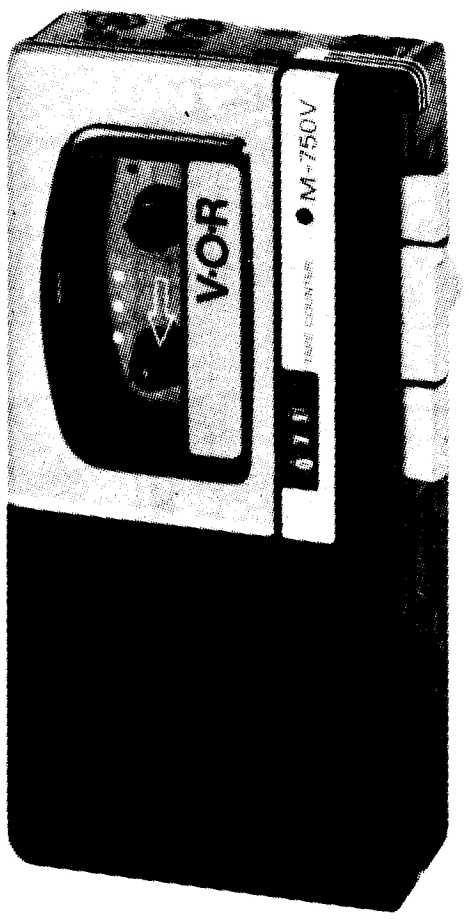

Model Name Using Similar Mechanism	New Mechanism
Tape Transport Mechanism Type	MZ-750V-14

SPECIFICATIONS

Tape	(MICROCASSETTE)™ (normal position type)
Recording system	2-track 1-channel monaural
Speaker	Approx. 4 cm ($1\frac{5}{8}$ inches) dia.
Tape speed	2.4 cm/s (15/16 ips), 1.2 cm/s (15/32 ips)
Frequency response	250–4,000 Hz (at 2.4 cm position)
Input	Microphone jack (minijack) (PLUG IN POWER) sensitivity 0.3 mV for 3 kilohm or lower impedance microphone
Output	Earphone jack (minijack) for 8–300 ohm earphone
Power output	150 mW (at 10% harmonic distortion)
Battery life (recording)	Sony SUM-3 (NS): Approx. 6 hours Sony AM3 (N): Approx. 18 hours
Power requirement	3 V DC, two size AA (R6) batteries DC IN 3 V jack accepts: • Sony AC-D2M AC power adaptor (optional) for use on 120 V AC, 60 Hz • Sony DCC-70 car battery cord (optional) for use on 12 V car battery
Dimensions	Approx. 66.5 × 124.2 × 29.7 mm (w/h/d) ($2\frac{5}{8}$ × 5 × $1\frac{3}{16}$ inches) incl. projecting parts and controls
Weight	Approx. 190 g (6.8 oz) incl. batteries

MICROFILM

MICROCASSETTE ™ CORDER

SONY®

TC

LOCATION OF CONTROLS

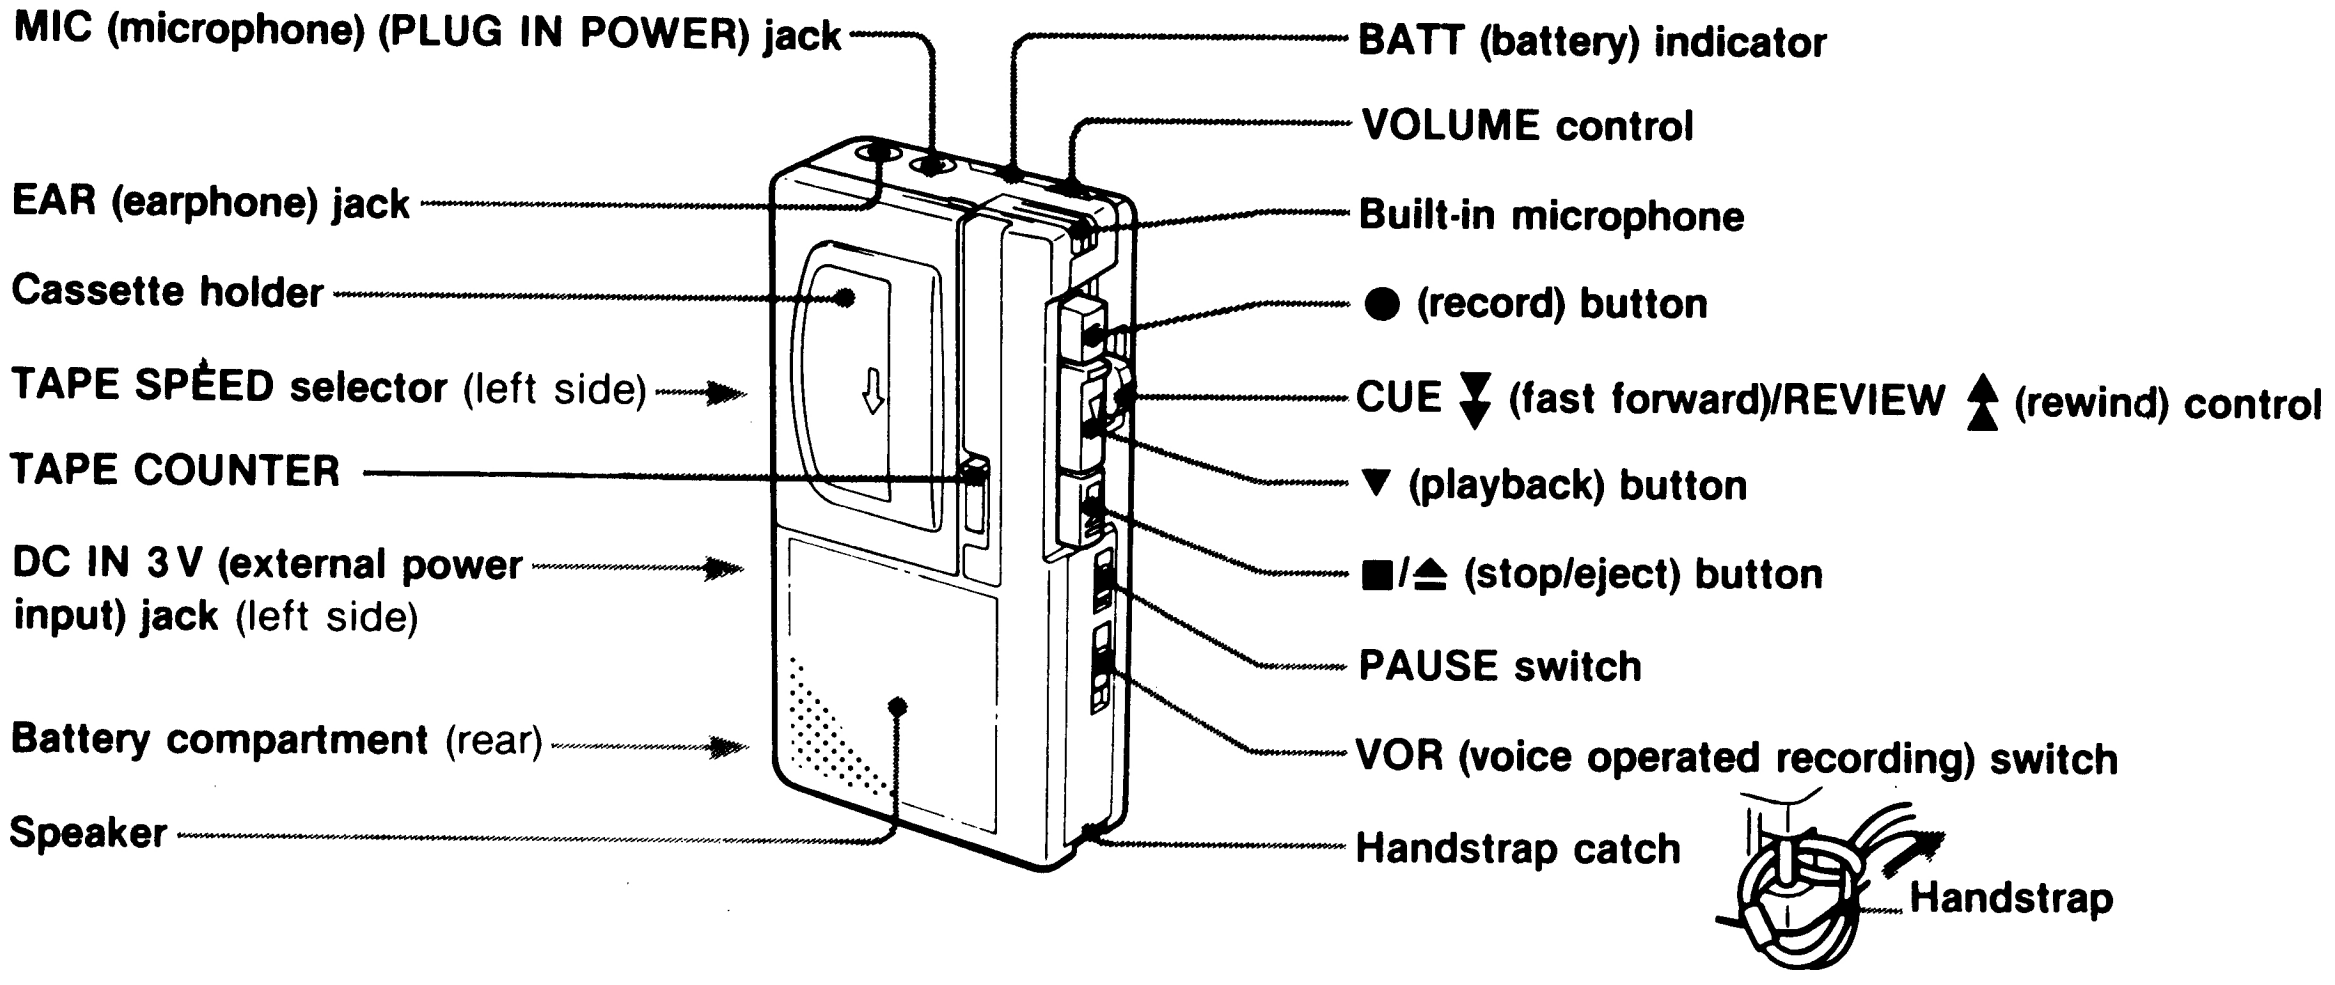
MIC (microphone) (PLUG IN POWER) jack
EAR (earphone) jack
Cassette holder
TAPE SPEED selector (left side)
TAPE COUNTER
DC IN 3 V (external power input) jack (left side)
Battery compartment (rear)
Speaker
BATT (battery) indicator
VOLUME control
Built-in microphone
● (record) button
CUE ⯯ (fast forward)/REVIEW ⯭ (rewind) control
▼ (playback) button
■/⏏ (stop/eject) button
PAUSE switch
VOR (voice operated recording) switch
Handstrap catch
Handstrap

MAINTENANCE

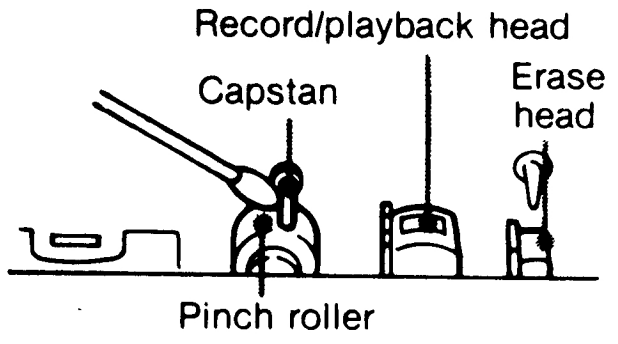
Record/playback head
Capstan
Erase head
Pinch roller

Cleaning the head
Clean the tape head after every 10 hours of use to enjoy optimum sound. Moisten a cotton swab or a soft cloth with alcohol and wipe the parts shown in the illustration.

Cleaning the casing
Clean the casing with a soft cloth slightly moistened with water or a mild detergent solution. Do not use alcohol, benzine or thinner as they may mar the finish.

NOTES ON MICROCASSETTE

To protect cassettes from accidental erasure

Break out and remove the tab.

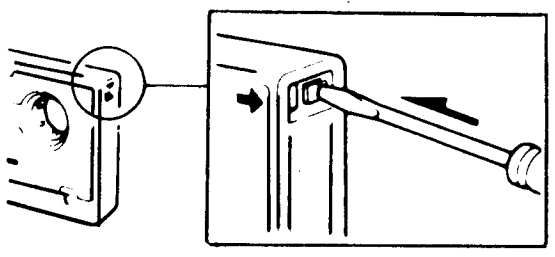

To reuse a cassette
Cover the slot with plastic tape.

Plastic tape

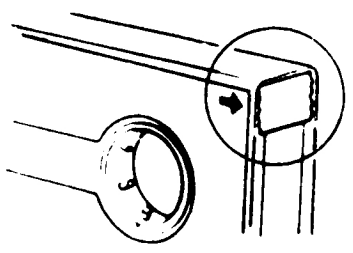

This unit uses only standard Microcassettes. Non standard cassettes cannot be used because their "L" dimension (see illustration) is different.

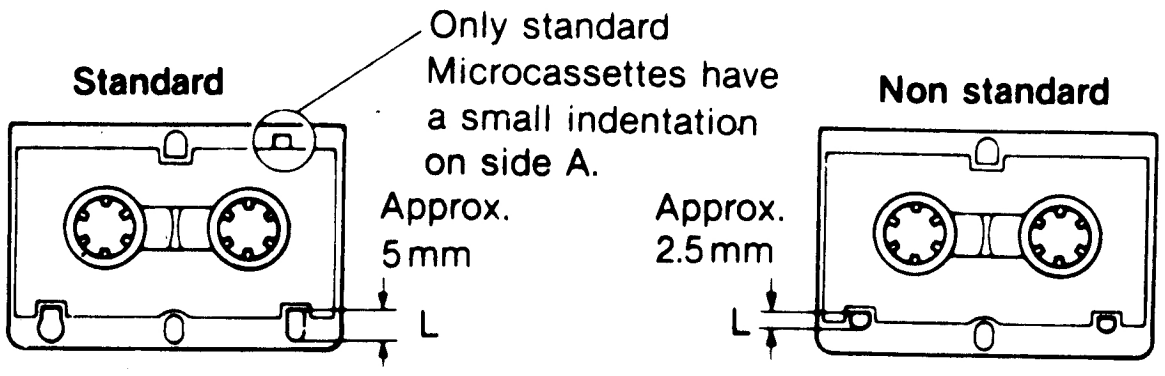
Standard
Only standard Microcassettes have a small indentation on side A.
Approx. 5 mm
L
Non standard
Approx. 2.5 mm
L

Note: Use only the recommended AC power adaptor or car battery cord manufactured by Sony. Polarity of the plugs of other manufacturers may be different.



Polarity of the Sony plug

SECTION 1
ADJUSTMENTS

1-1. MECHANICAL ADJUSTMENT AND MEASUREMENT

PRECAUTION

1. Clean the following parts with a denatured-alcohol-moistened swab:

record/playback head	pinch roller
erase head	rubber belts
capstan	

2. Demagnetize the record/playback head with a head demagnetizer. (Do not bring the head demagnetizer close to the erase head.)
3. Do not use a magnetized screwdriver for the adjustments.
4. The adjustments should be performed with the rated power supply voltage unless otherwise noted.

Power supply voltage: 3 V dc
TAPE SPEED switch: 2.4 cm

Torque Measurement

Torque	Meter Reading	Torque Meter
Forward	5 – 9 g·cm (0.07 – 0.12 oz·inch)	CQ-103M
Fast Forward and Rewind	30 – 50 g·cm (0.42 – 0.69 oz·inch)	CQ-201M

Pinch Roller Pressure Adjustment

– Playback Mode –

Slowly return the pinch roller and read the spring scale just when the pinch roller starts rotating.

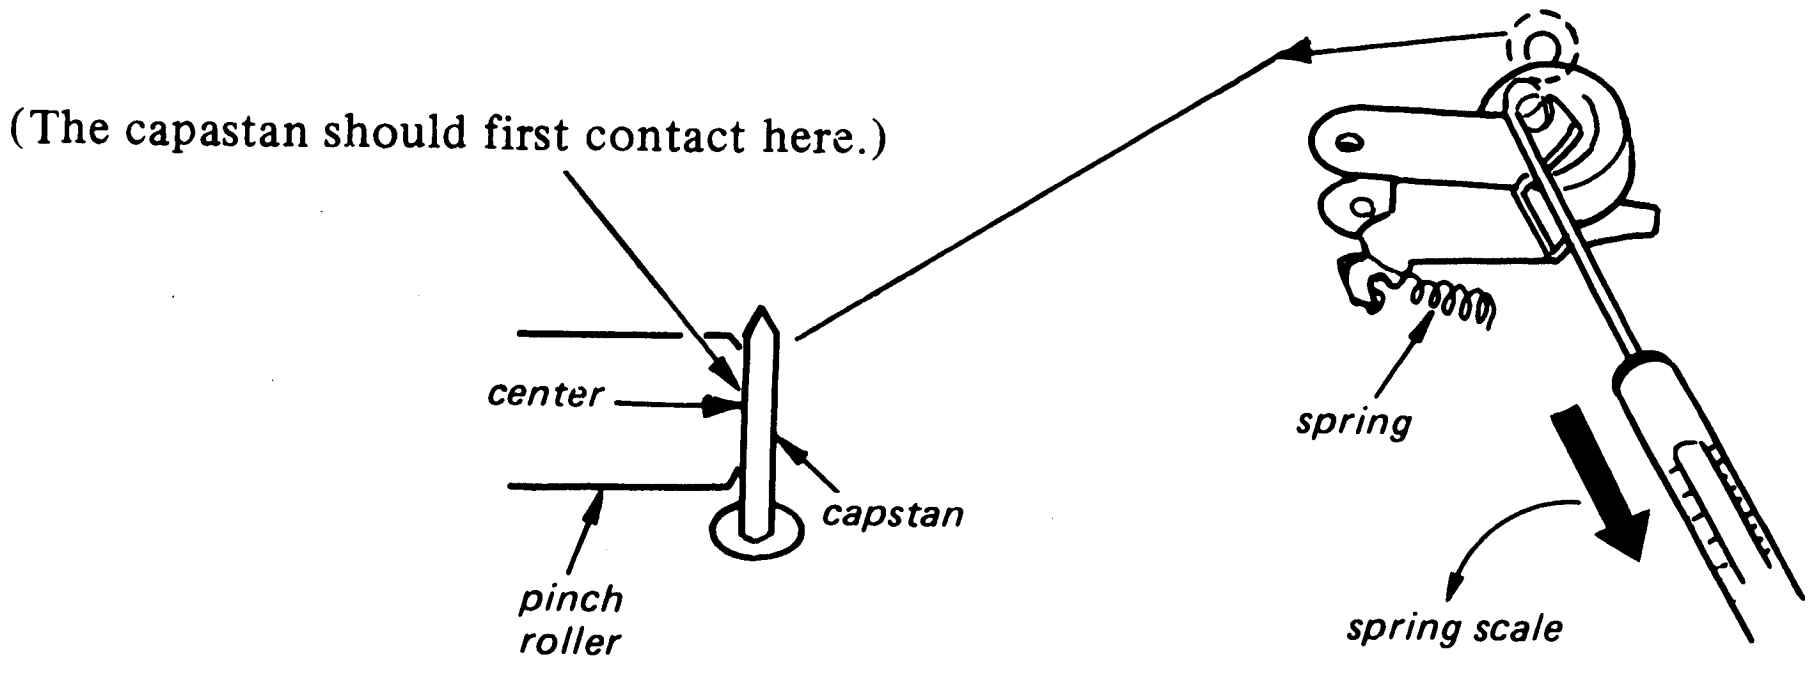
(The capastan should first contact here.)

120 – 190 g
(4.23 – 6.69 oz)

1-2. ELECTRICAL ADJUSTMENTS

Standard Input Level

	MIC
source impedance	600 Ω
input level	0.77 mV (-60 dB)
input frequency	1 kHz

Standard Output Level

	EARPHONE
load impedance	10 kΩ
output level	0.24 mV (-10 dB)

Record/playback Head Azimuth Adjustment

Setting:

VOLUME control: mechanical mid
TAPE SPEED switch: 2.4 cm/s
VOR switch: OFF

Procedure:

1. Mode: playback

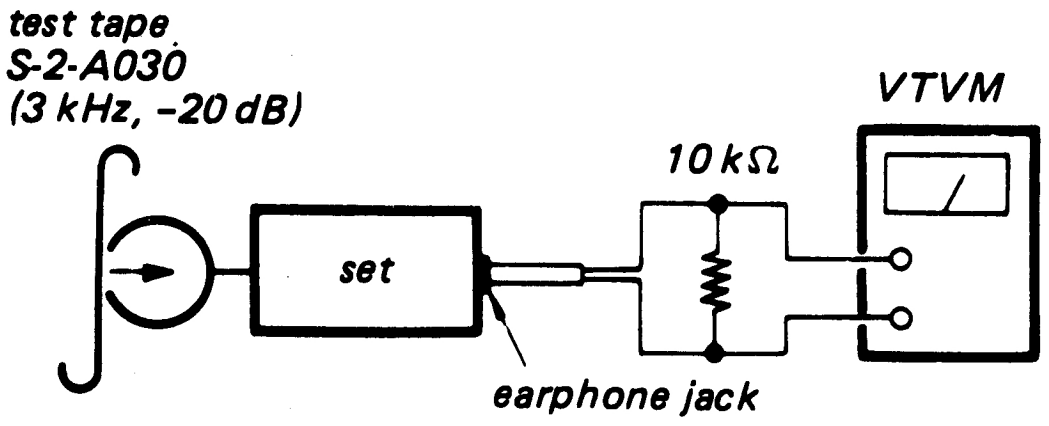
test tape
S-2-A030
(3 kHz, -20 dB)
VTVM
10 kΩ
set
earphone jack

2. Turn the adjustment screw to obtain the maximum reading on VTVM.

   Note: Several peaks may appear, but take the maximum.

Adjustment Location:

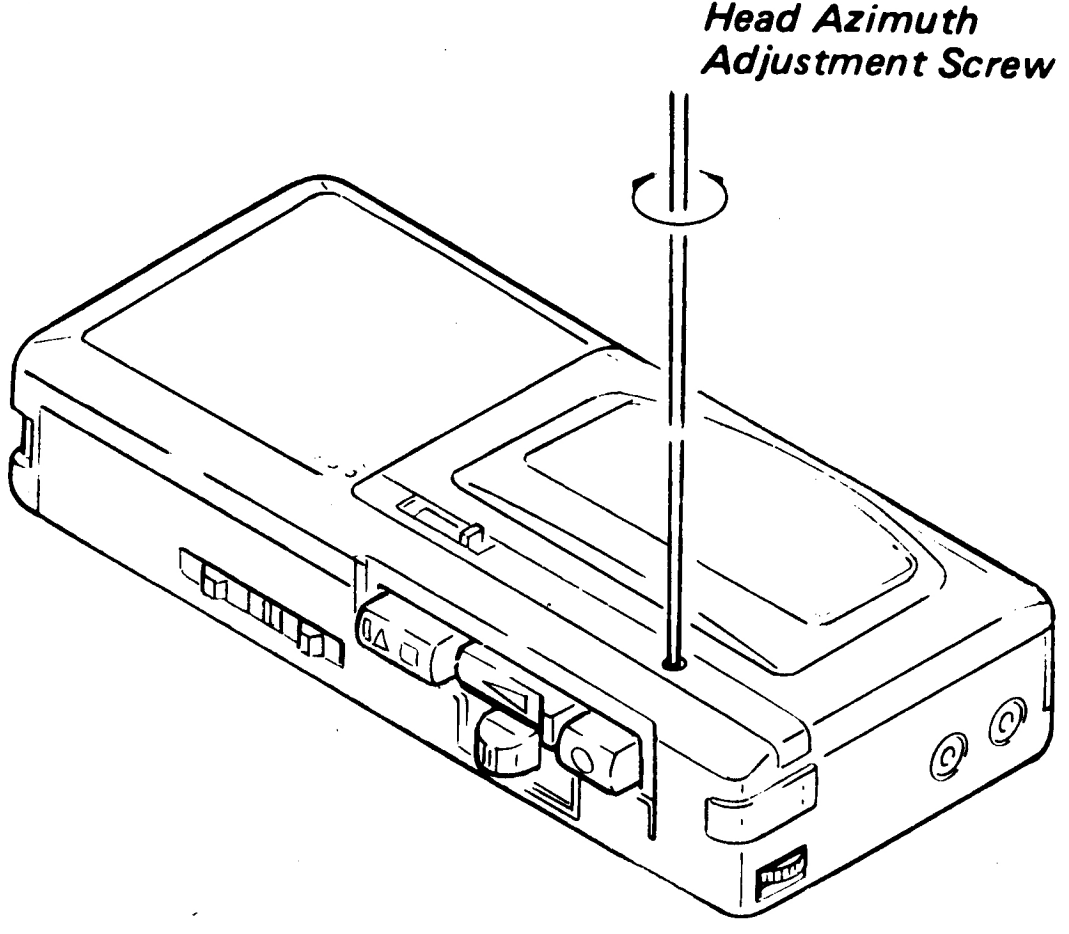
Head Azimuth
Adjustment Screw

Tape Speed Adjustment

Setting:

VOLUME control: mechanical mid
VOR switch: OFF

Procedure:

Mode: playback

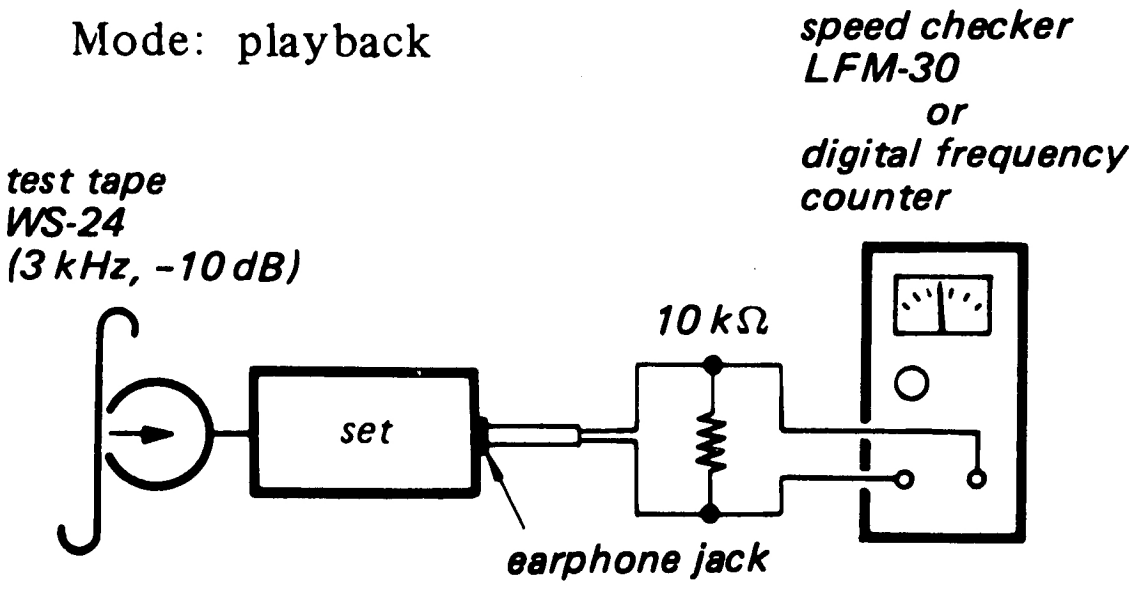
speed checker
LFM-30
or
digital frequency
counter
test tape
WS-24
(3 kHz, -10 dB)
10 kΩ
set
earphone jack

Specification:

Tape speed	Speed checker	Digital frequency counter
2.4 cm/s	±4%	2,880 – 3,120 Hz
1.2 cm/s	±5%	1,425 – 1,575 Hz

Frequency difference between the beginning and the end of the tape should be within 0.5%.
2.4 cm/s (15 Hz)
1.2 cm/s (7.5 Hz)

Reference wow: 0.6% or less at 2.4 cm/s
1.3% or less at 1.2 cm/s

Adjustment Location:

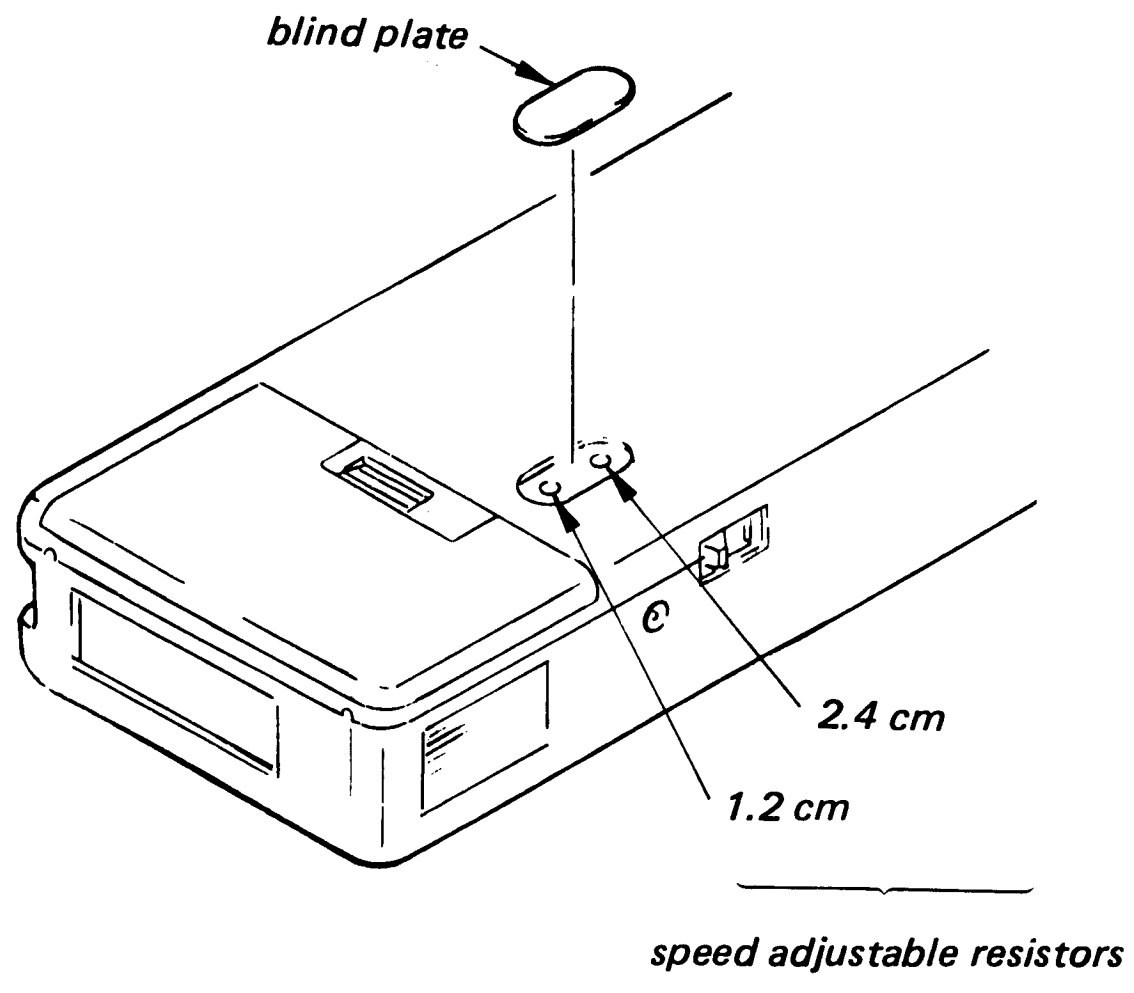
blind plate
2.4 cm
1.2 cm
speed adjustable resistors

SECTION 2
DIAGRAMS

2-1. MOUNTING DIAGRAM

- **Semiconductor Lead Layouts**

LA5521M
NJM2072M
NJM2073M


8 7 6 5
1 2 3 4
(TOP VIEW)

2SB624-BV4
2SC1623-L7



1T22A


cathode
anode

GL-9PR10


anode
cathode

Note:
- •—•— : parts extracted from the conductor side.
- ■ : part mounted on the conductor side.
- ⊗ : Through hole.
- ▨ : component-side pattern.
- ☐ : printed resistor.

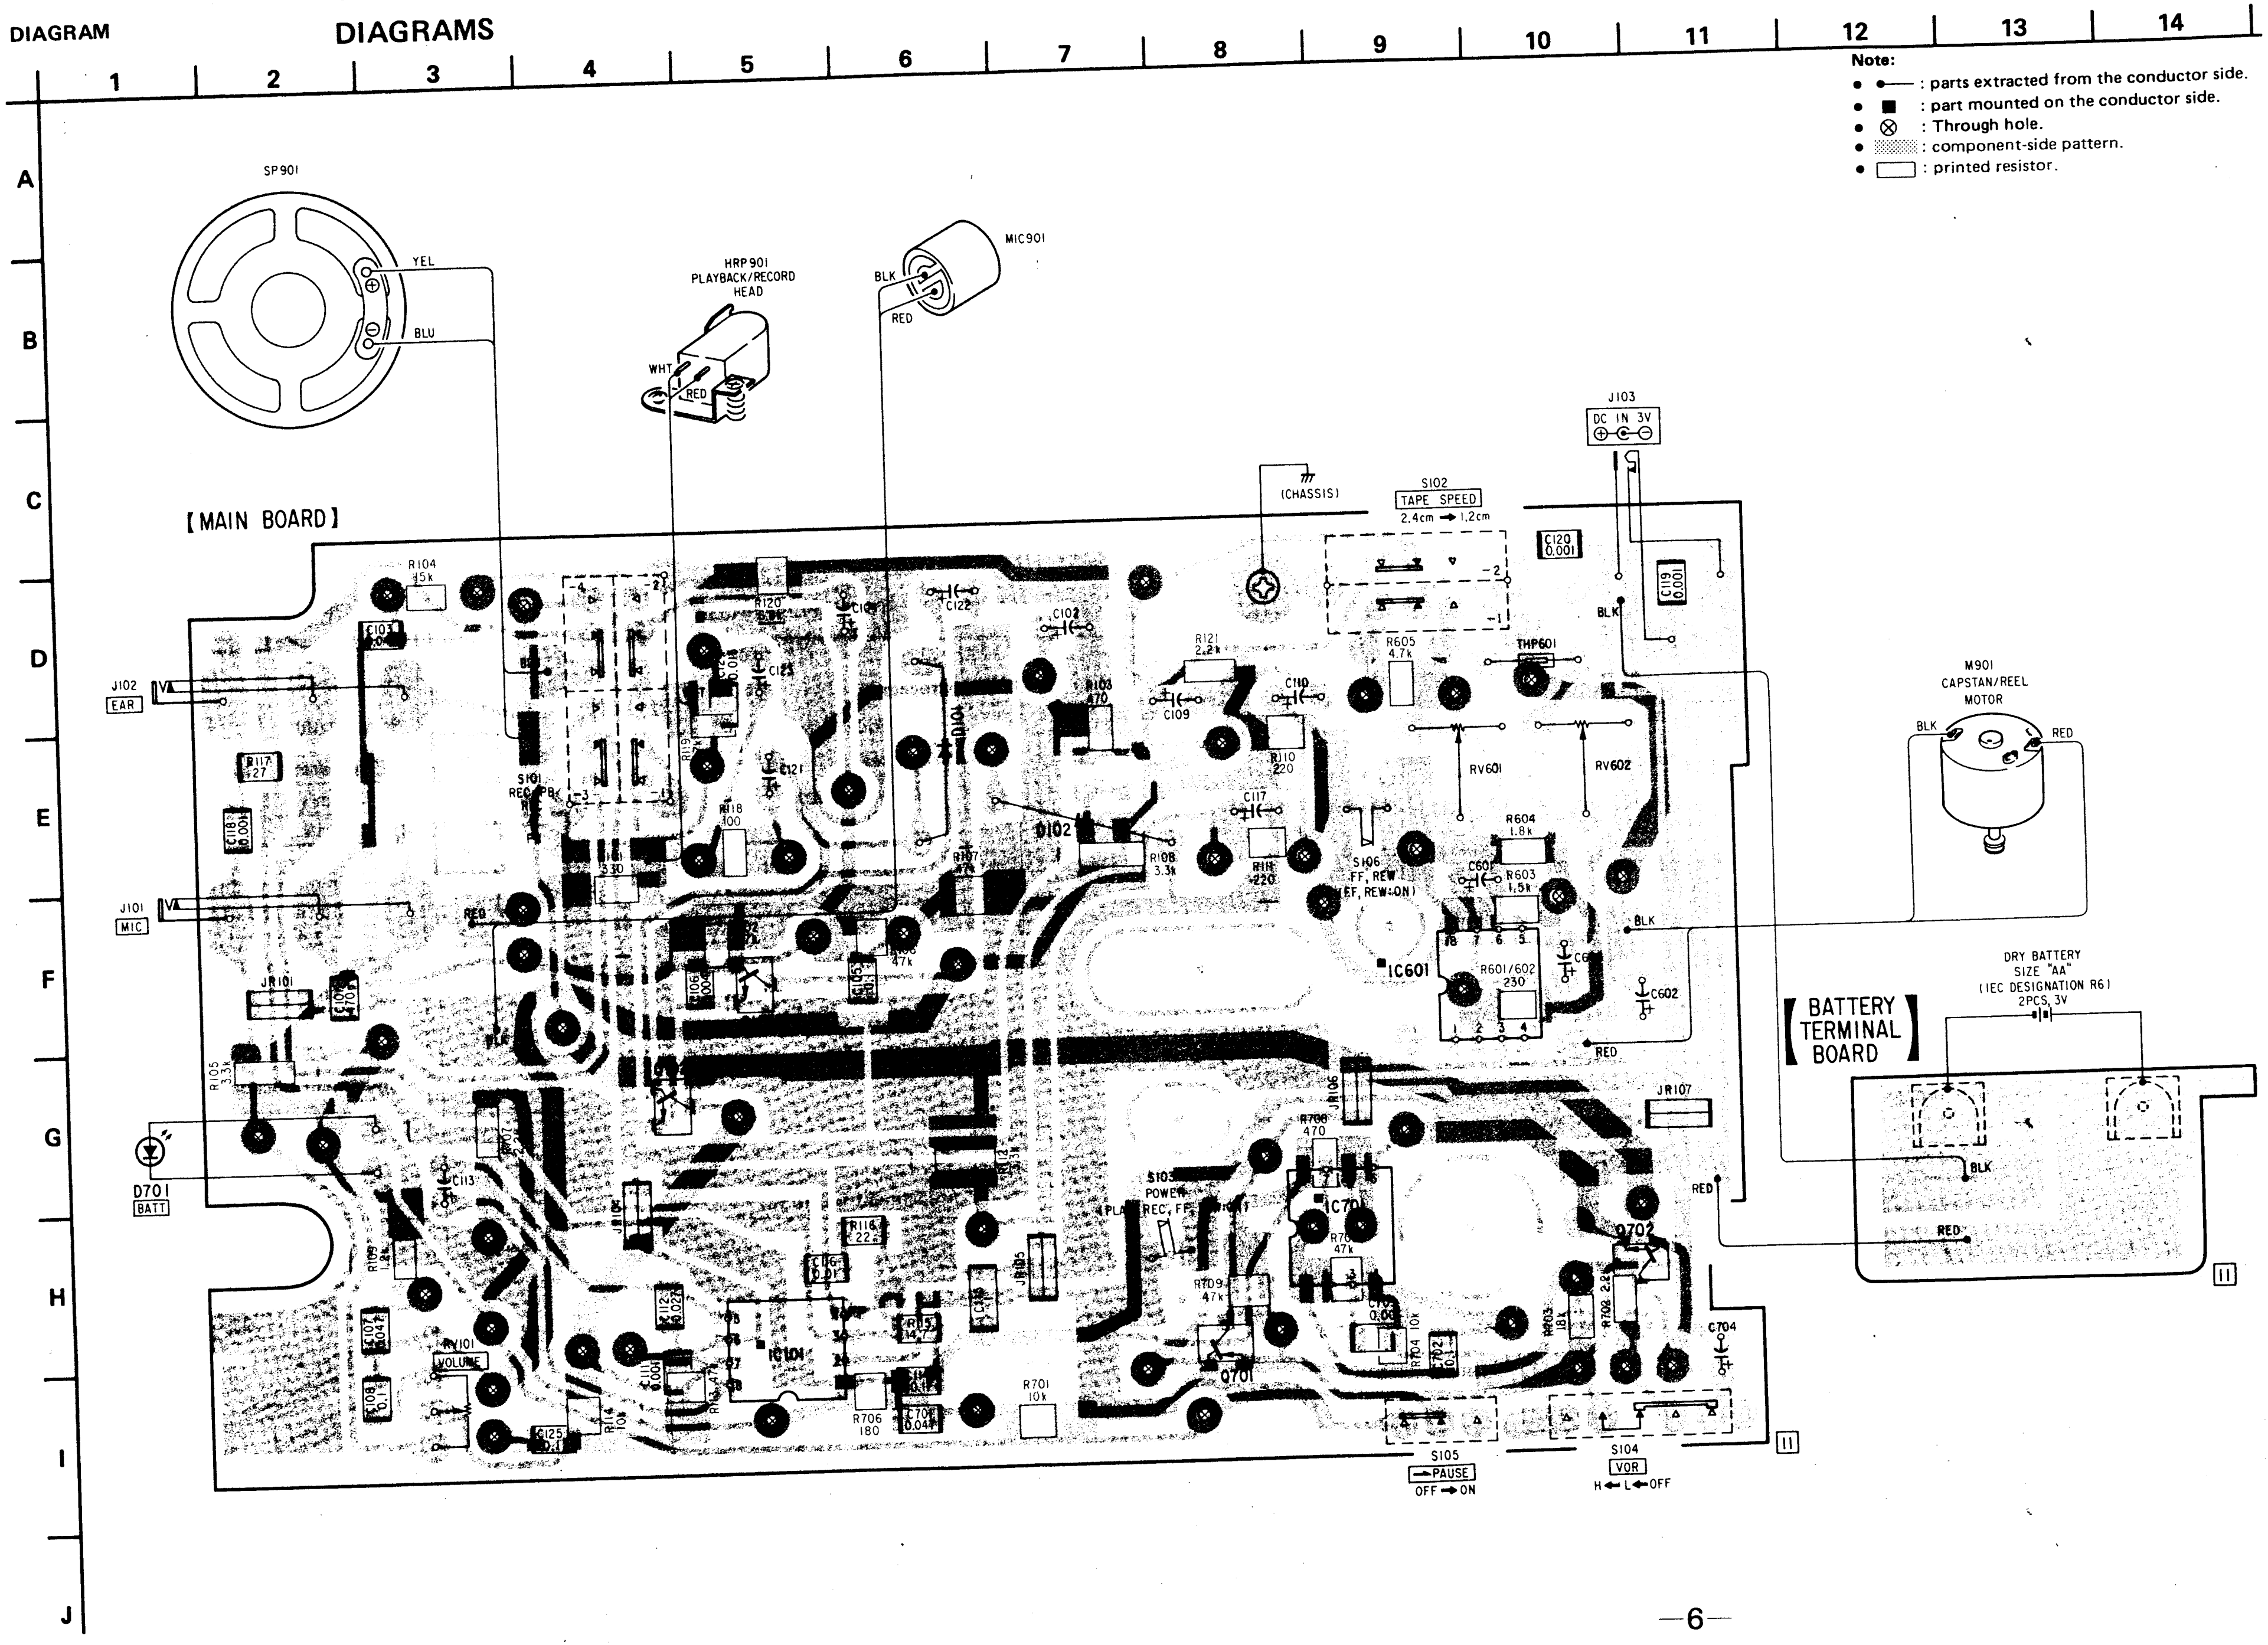
1
2
3
4
5
6
7
8
9
10
11
12
13
14
A
B
C
D
E
F
G
H
I
J
SP901
YEL
BLU
HRP901
PLAYBACK/RECORD
HEAD
WHT
RED
MIC901
BLK
RED
J103
DC IN 3V
(CHASSIS)
S102
TAPE SPEED
2.4cm → 1.2cm
[MAIN BOARD]
R104 15k
C103
C120 0.001
C119 0.001
J102 EAR
J101 MIC
R117 27
C118 0.001
R120
C101
C122
C102
R121 2.2k
C110
C109
R103 470
R110 220
R605 4.7k
THP601
RV601
RV602
M901
CAPSTAN/REEL
MOTOR
BLK
RED
S101
REC/PB
C123
C121
R119
R118 100
D101
D102
R108 3.3k
C117
R111 220
S106
FF, REW
(FF, REW-ON)
R604 1.8k
C601
R603 1.5k
IC601
R601/602 230
C602
BLK
RED
R106
R105 47k
JR101
C104
R105 3.3k
JR106
JR107
BATTERY TERMINAL BOARD
DRY BATTERY
SIZE "AA"
(IEC DESIGNATION R6)
2PCS, 3V
BLK
RED
D701
BATT
C113
R107
R109 1.2k
R116 22
R113
JR105
S103
POWER
PLAY, REC, FF, REW
R708 470
IC701
R707 47k
R709 47k
Q701
Q702
R702 2.2
R703 18k
R704 10k
C702
C704
C107 0.047
C108 0.1
RV101 VOLUME
C124 0.022
C111 0.001
R114 10k
IC101
C116
R115 4.7
C125 0.1
R112
R706 180
C705 0.047
R701 10k
S105
PAUSE
OFF → ON
S104
VOR
H ← L ← OFF
11

2-2. SCHEMATIC DIAGRAM

M-750V M-750V

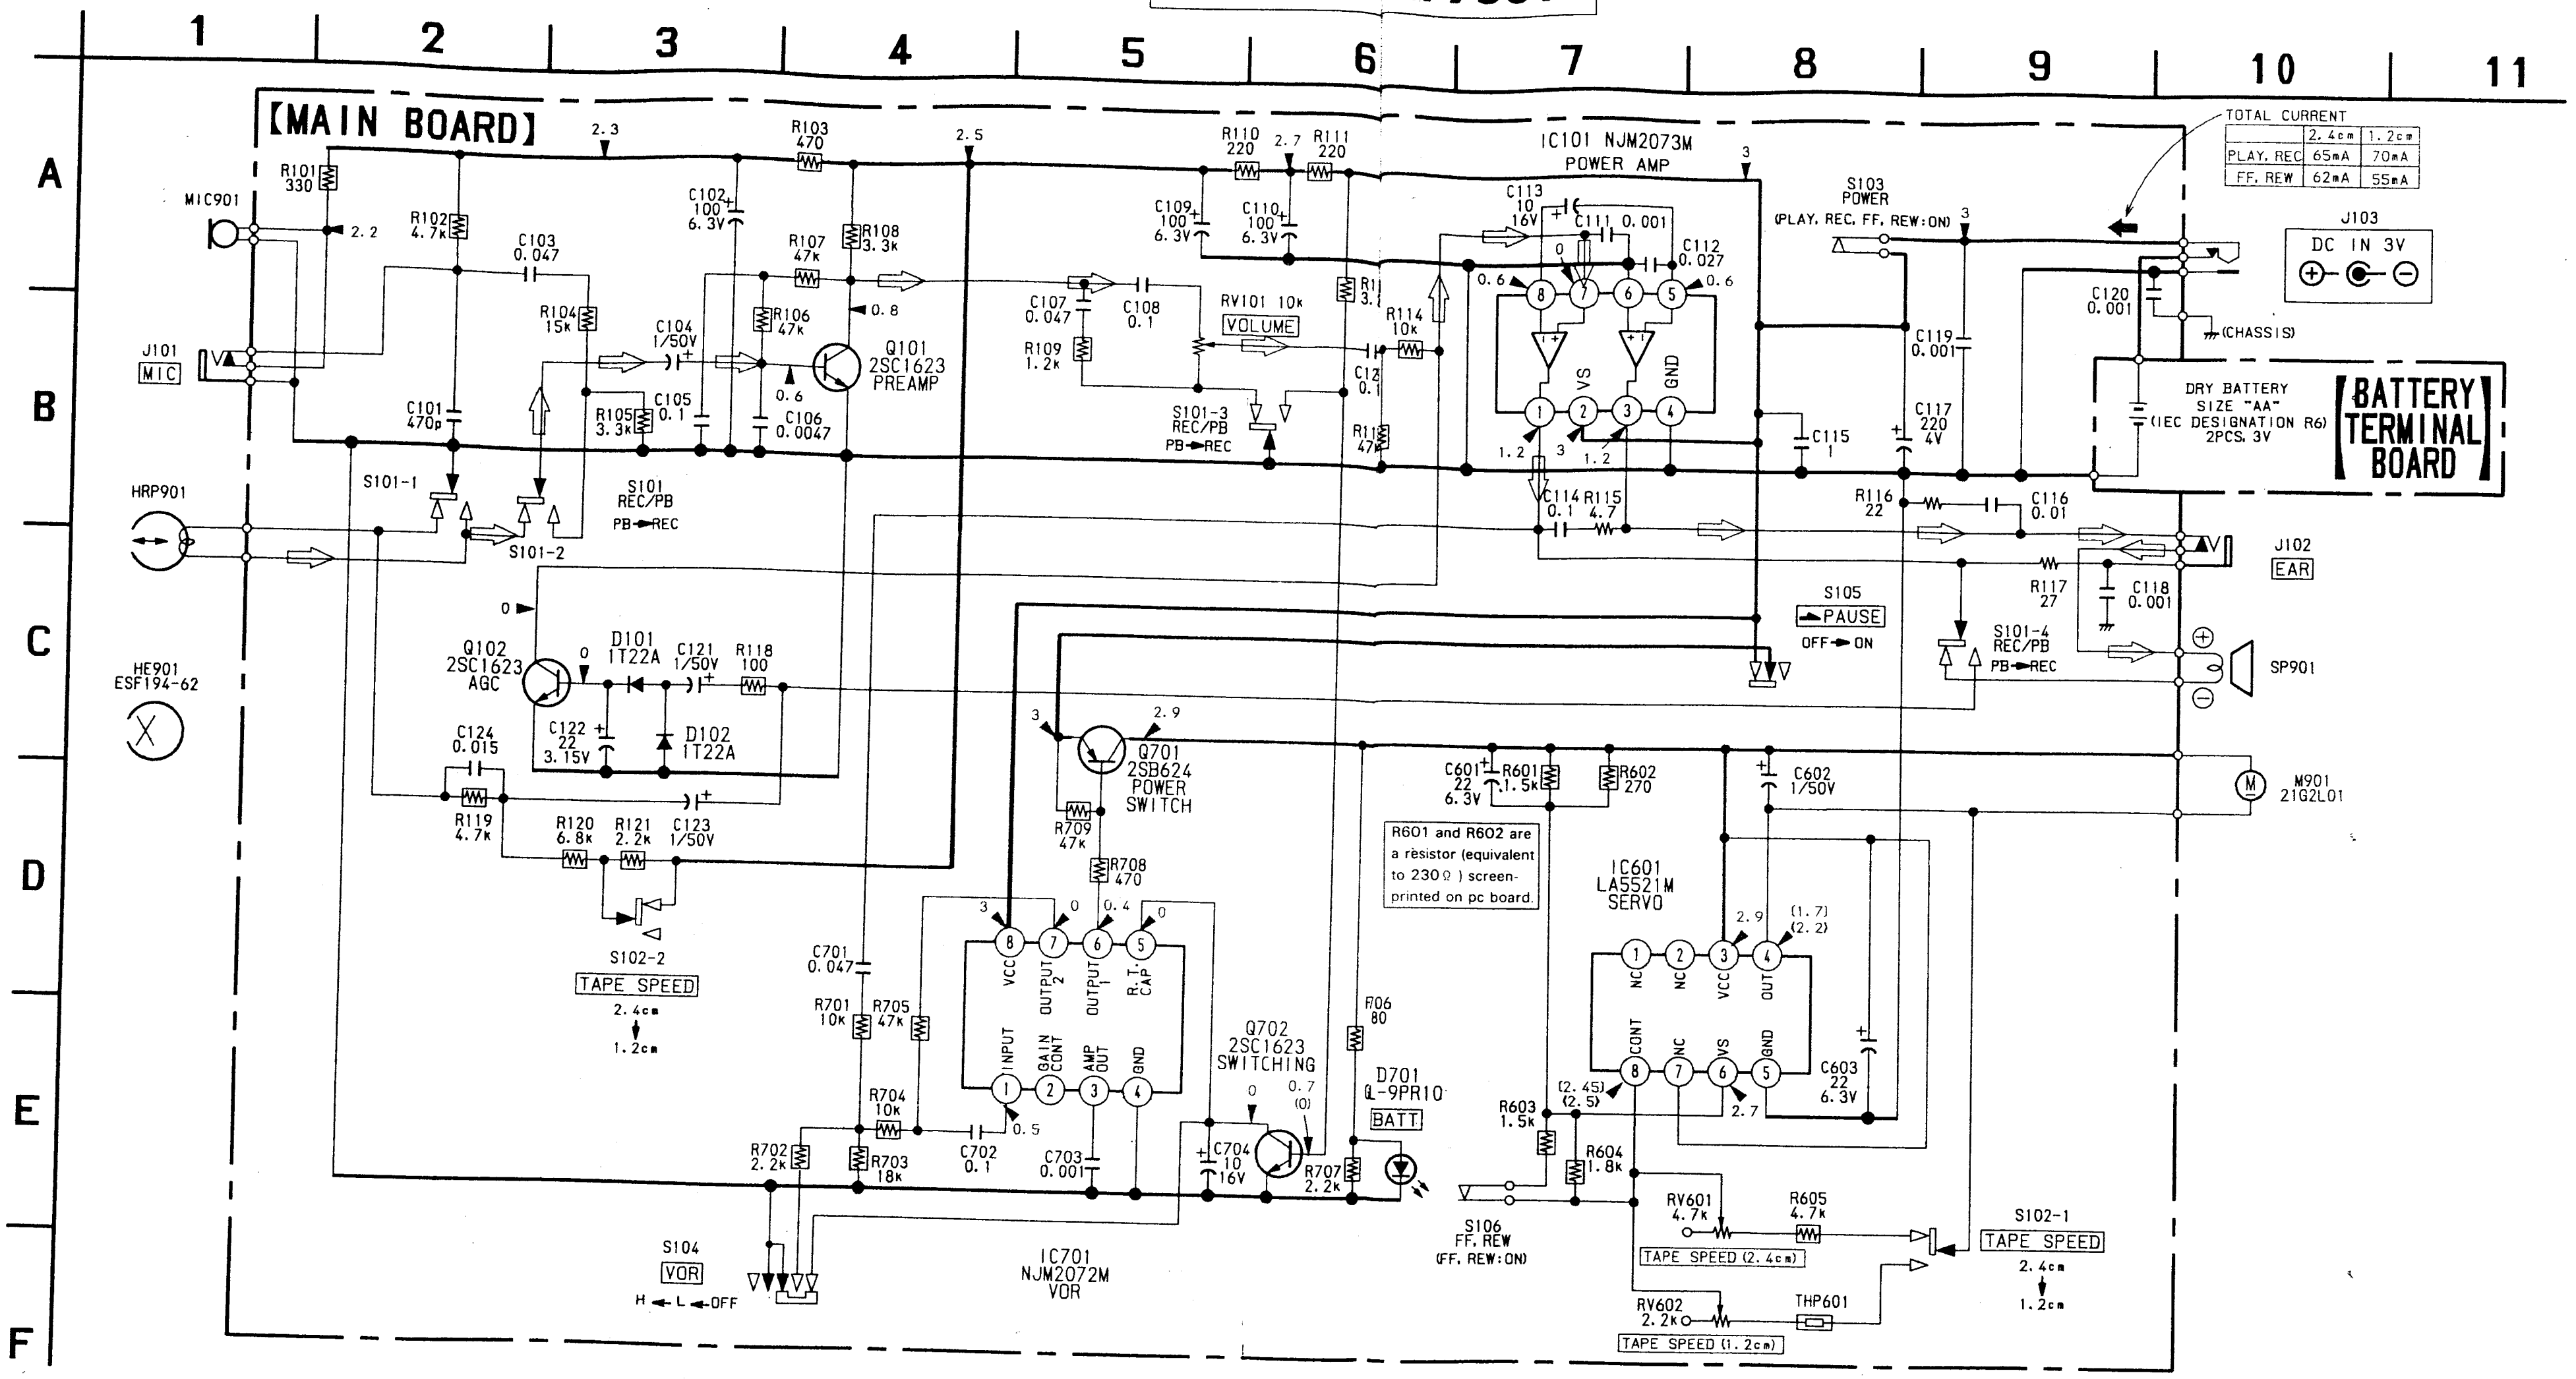
1
2
3
4
5
6
7
8
9
10
11
A
B
C
D
E
F
【MAIN BOARD】
MIC901
J101 MIC
HRP901
HE901 ESF194-62
R101 330
R102 4.7k
C103 0.047
C101 470p
R103 470
C102 100 6.3V
R104 15k
C104 1/50V
R105 3.3k
C105 0.1
R106 47k
R107 47k
R108 3.3k
C106 0.0047
Q101 2SC1623 PREAMP
S101-1
S101 REC/PB PB→REC
S101-2
Q102 2SC1623 AGC
D101 1T22A
C121 1/50V
R118 100
C122 22 3.15V
D102 1T22A
C124 0.015
R119 4.7k
R120 6.8k
R121 2.2k
C123 1/50V
S102-2
TAPE SPEED
2.4cm
1.2cm
R110 220
R111 220
C109 100 6.3V
C110 100 6.3V
C107 0.047
C108 0.1
R109 1.2k
RV101 10k VOLUME
S101-3 REC/PB PB→REC
R114 10k
Q701 2SB624 POWER SWITCH
R709 47k
R708 470
C701 0.047
R701 10k
R705 47k
R704 10k
R702 2.2k
R703 18k
C702 0.1
C703 0.001
S104 VOR
H ← L ← OFF
IC701 NJM2072M VOR
VCC
OUTPUT 2
OUTPUT 1
R.T. CAP
INPUT
GAIN CONT
AMP OUT
GND
Q702 2SC1623 SWITCHING
C704 10 16V
R707 2.2k
R706 80
D701 ℓ-9PR10 BATT
IC101 NJM2073M POWER AMP
C113 10 16V
C111 0.001
C112 0.027
VS
GND
C114 0.1
R115 4.7
C115 1
S105 PAUSE OFF→ON
S103 POWER (PLAY, REC, FF, REW:ON)
C119 0.001
C117 220 4V
C120 0.001
R116 22
C116 0.01
R117 27
C118 0.001
S101-4 REC/PB PB→REC
J103 DC IN 3V
(CHASSIS)
DRY BATTERY SIZE "AA" (IEC DESIGNATION R6) 2PCS. 3V
BATTERY TERMINAL BOARD
J102 EAR
SP901
M901 21G2L01
TOTAL CURRENT
2.4cm 1.2cm
PLAY, REC 65mA 70mA
FF, REW 62mA 55mA
C601 22 6.3V
R601 1.5k
R602 270
C602 1/50V
R601 and R602 are a resistor (equivalent to 230Ω) screen-printed on pc board.
IC601 LA5521M SERVO
NC
VCC
OUT
CONT
C603 22 6.3V
R603 1.5k
R604 1.8k
S106 FF, REW (FF, REW:ON)
RV601 4.7k
R605 4.7k
TAPE SPEED (2.4cm)
RV602 2.2k
THP601
TAPE SPEED (1.2cm)
S102-1 TAPE SPEED
2.4cm
1.2cm

• IC BLOCK DIAGRAMS

IC601 LA5521M

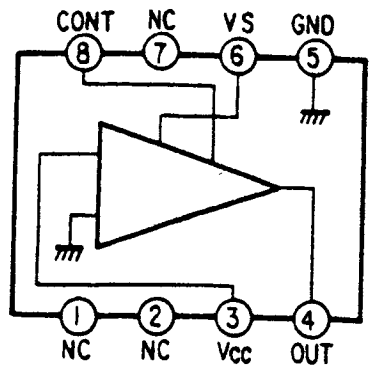
CONT
NC
VS
GND
8
7
6
5
1
2
3
4
NC
NC
Vcc
OUT

IC701 NJM2072M

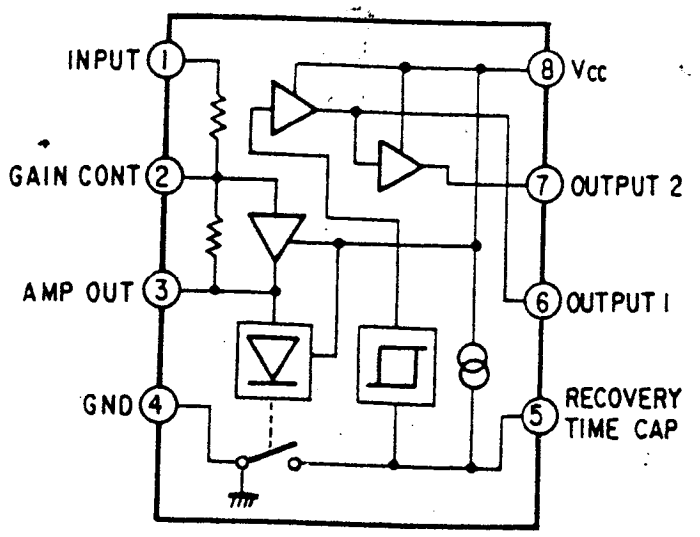
INPUT 1
GAIN CONT 2
AMP OUT 3
GND 4
8 Vcc
7 OUTPUT 2
6 OUTPUT 1
5 RECOVERY TIME CAP

Note:

- All capacitors are in μF unless otherwise noted. pF: μμF 50WV or less are not indicated except for electrolytics and tantalums.
- ⇨ : signal path.
- ━ : B+ bus.
- ▭ : adjustment for repair.
- Total current is measured with no cassette installed.
- Power voltage is 3 V and fed with regurated dc power supply from DC IN 3 V jack.
  Voltages are dc with respect to ground in PLAY mode.
  Voltage variations may be noted due to normal production tolerances.
  no mark: PLAY
  ( ): REC
  [ ]: 2.4 cm } PLAY
  ≪ ≫: 1.2 cm
- ─W─ : printed resistor.

- Switch

Ref. No.	Switch	Position
S101	REC/PB	PB
S102	TAPE SPEED	2.4 cm
S103	POWER	OFF
S104	VOR	OFF
S105	PAUSE	OFF
S106	FF, REW	OFF

SECTION 3
EXPLODED VIEW AND PARTS LIST

NOTE:
- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The construction parts of an assembled part are indicated with a collation number in the remark column.

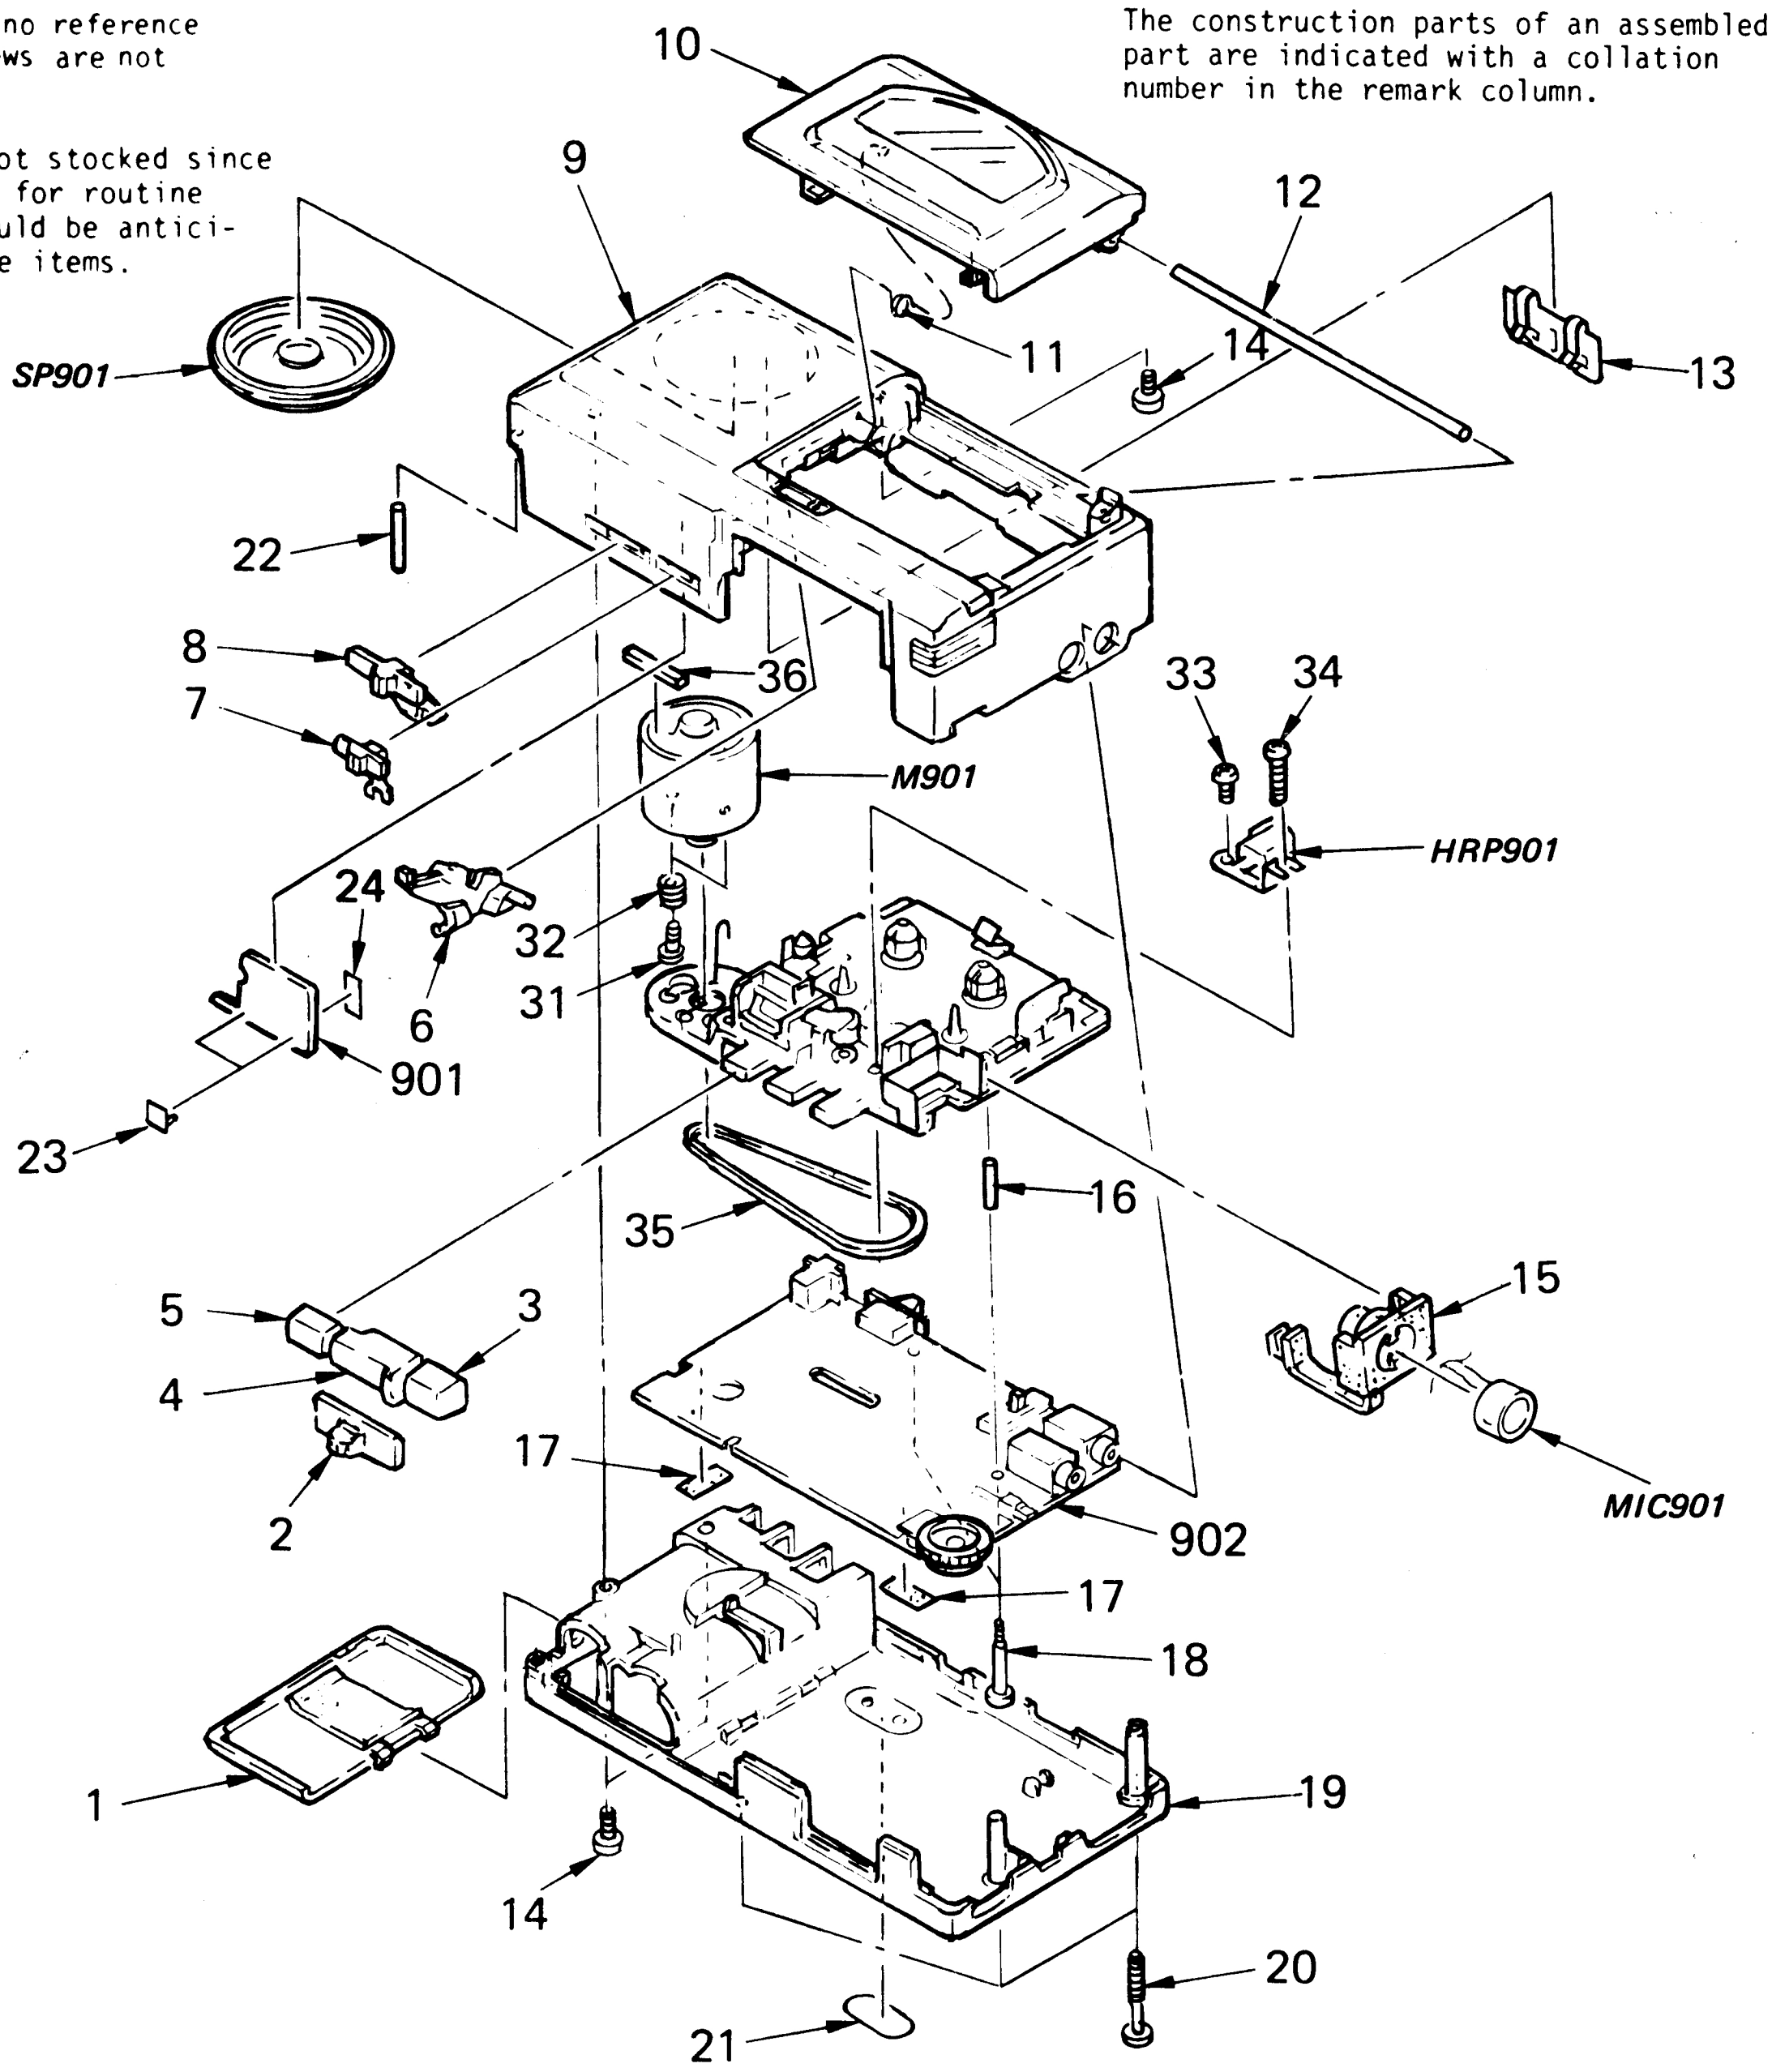

No.	Part No.	Description	Remarks
1	X-3342-112-1 X-3342-113-1	(BLACK)......LID ASSY, BATTERY CASE (AEP:SPECIAL BLACK) ....LID ASSY, BATTERY CASE	
2	3-342-168-01	BUTTON (F/R)	
3	3-342-164-01	BUTTON (REC)	
4	3-342-165-01	BUTTON (PLAY)	
5	3-342-166-01	BUTTON (STOP)	
6	3-342-162-01	LEVER (EJECT)	
7	3-342-160-01 3-342-160-11	(BLACK)..............KNOB (PAUSE) (AEP:SPECIAL BLACK)...KNOB (PAUSE)	
8	3-342-159-01 3-342-159-11	(BLACK)..............KNOB (VOR) (AEP:SPECIAL BLACK)...KNOB (VOR)	
9	X-3342-118-1 X-3342-119-1	(BLACK)......CABINET (FRONT) SUB ASSY (AEP:SPECIAL BLACK) ....CABINET (FRONT) SUB ASSY	
10	X-3342-120-1 X-3342-121-1	(BLACK)......LID ASSY, CASSETTE (AEP:SPECIAL BLACK) ...LID ASSY, CASSETTE	
11	3-342-175-01	SPRING, TORSION	
12	*3-576-075-21	SHAFT, CASSETTE HOLDER	
13	3-576-074-00	SPRING	
14	3-318-203-71	SCREW (B1.7X5), TAPPING	
15	3-342-163-01	HOLDER, MICROPHONE	
16	3-342-176-01	SPACER, PC BOARD	
17	3-831-441-11	CUSHION (B)	
18	3-342-156-01	SCREW (M1.4X11.8), TAPPING	
19	3-342-170-01 3-342-170-11	(BLACK)...............CABINET (REAR) (AEP:SPECIAL BLACK)...CABINET (REAR)	
20	3-342-171-41	SCREW (B1.7), TAPPING	
21	3-342-155-01 3-342-155-11	(BLACK)...............PLATE, BLIND (AEP:SPECIAL BLACK)...PLATE, BLIND	
22	3-576-082-00	PIN, PARALLEL	
23	3-576-071-00	TERMINAL, BATTERY	
24	3-831-441-XX	SPACER	
31	3-309-836-01	SHAFT, FITTING, MOTOR	
32	3-570-770-00	CUSHION (A), MOTOR	
33	3-318-203-61	SCREW (B1.7X4), TAPPING	
34	3-318-203-92	SCREW (B1.7X9), TAPPING	
35	3-316-852-00	BELT	
36	9-911-844-XX	CUSHION	
901	*1-622-996-11	PC BOARD, BATTERY TERMINAL	
902	A-3015-532-A	PC BOARD ASSY, MAIN	
HRP901	1-543-432-11	HEAD, MAGNETIC (REC/PB)	
M901	1-541-430-21	MOTOR	
MIC901	1-542-080-11	MICROPHONE, BUILT-IN	
SP901	1-503-761-11	SPEAKER	

SECTION 4
ELECTRICAL PARTS LIST

NOTE:
- Items marked " ★ " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- If there are two or more same circuitsin a set such as a stereophonic machine, only typical circuit parts may be indicated and capacitors and resistors in other same circuits may be omitted.

CAPACITORS:
MF:μF, PF:μμF.

RESISTORS
- All resistors are in ohms.
- F : nonflammable

COILS
- MMH : mH, UH : μH

SEMICONDUCTORS
In each case, U : μ, for example:
UA...: μA..., UPA...: μPA..., UPC...: μPC, UPD...: μPD...

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
901	*1-622-996-11	PC BOARD, BATTERY TERMINAL			
902	A-3015-532-A	PC BOARD ASSY, MAIN			
C101	1-163-133-00	CERAMIC CHIP	470PF	10%	50V
C102	1-123-661-00	ELECT	100MF	20%	6.3V
C103	1-163-035-00	CERAMIC CHIP	0.047MF		50V
C104	1-124-438-00	ELECT	1MF	20%	50V
C105	1-163-038-00	CERAMIC CHIP	0.1MF		25V
C106	1-163-017-00	CERAMIC CHIP	0.0047MF	10%	50V
C107	1-163-035-00	CERAMIC CHIP	0.047MF		50V
C108	1-163-038-00	CERAMIC CHIP	0.1MF		25V
C109	1-123-661-00	ELECT	100MF	20%	6.3V
C110	1-123-661-00	ELECT	100MF	20%	6.3V
C111	1-163-141-00	CERAMIC CHIP	0.001MF	10%	50V
C112	1-163-986-00	CERAMIC CHIP	0.027MF	10%	25V
C113	1-123-617-00	ELECT	10MF	20%	16V
C114	1-163-038-00	CERAMIC CHIP	0.1MF		25V
C115	1-162-638-11	CERAMIC CHIP	1MF		16V
C116	1-163-021-00	CERAMIC CHIP	0.01MF	10%	50V
C117	1-123-827-00	ELECT	220MF	20%	4V
C118	1-163-141-00	CERAMIC CHIP	0.001MF	10%	50V
C119	1-163-141-00	CERAMIC CHIP	0.001MF	10%	50V
C120	1-163-141-00	CERAMIC CHIP	0.001MF	10%	50V
C121	1-124-255-00	ELECT	1MF	20%	50V
C122	1-131-391-00	TANTALUM	22MF	10%	3.15V
C123	1-124-255-00	ELECT	1MF	20%	50V
C124	1-163-023-00	CERAMIC CHIP	0.015MF	10%	50V
C125	1-163-038-00	CERAMIC CHIP	0.1MF		25V
C601	1-124-638-11	ELECT	22MF	20%	6.3V
C602	1-123-611-00	ELECT	1MF	20%	50V
C603	1-124-638-11	ELECT	22MF	20%	6.3V
C701	1-163-035-00	CERAMIC CHIP	0.047MF		50V
C702	1-163-038-00	CERAMIC CHIP	0.1MF		25V
C703	1-163-141-00	CERAMIC CHIP	0.001MF	10%	50V
C704	1-123-617-00	ELECT	10MF	20%	16V
D101	8-719-022-21	DIODE 1T22A			
D102	8-719-022-21	DIODE 1T22A			
D701	8-719-909-10	DIODE GL-9PR10			
HRP901	1-543-432-11	HEAD, MAGNETIC (REC/PB)			
IC101	8-759-701-02	IC NJM2073M			
IC601	8-759-804-43	IC LA5521M			
IC701	8-759-701-51	IC NJM2072M			
J101	1-566-740-11	JACK (MIC)			
J102	1-566-740-11	JACK (EAR)			
J103	1-507-723-00	JACK, EXTENTION POWER (DC IN 3V)			

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
JR101	1-216-296-00	METAL CHIP	0	5%	1/8W
JR104	1-216-296-00	METAL CHIP	0	5%	1/8W
JR105	1-216-296-00	METAL CHIP	0	5%	1/8W
JR106	1-216-296-00	METAL CHIP	0	5%	1/8W
JR107	1-216-296-00	METAL CHIP	0	5%	1/8W
M901	1-541-430-21	MOTOR			
MIC901	1-542-080-11	MICROPHONE, BUILT-IN			
Q101	8-729-100-67	TRANSISTOR 2SC1623-L7			
Q102	8-729-100-67	TRANSISTOR 2SC1623-L7			
Q701	8-729-162-44	TRANSISTOR 2SB624-BV4			
Q702	8-729-100-67	TRANSISTOR 2SC1623-L7			
R101	1-249-411-11	CARBON	330	5%	1/6W
R102	1-249-425-11	CARBON	4.7K	5%	1/6W
R103	1-249-413-11	CARBON	470	5%	1/6W
R104	1-249-431-11	CARBON	15K	5%	1/6W
R105	1-249-423-11	CARBON	3.3K	5%	1/6W
R106	1-249-437-11	CARBON	47K	5%	1/6W
R107	1-249-437-11	CARBON	47K	5%	1/6W
R108	1-249-423-11	CARBON	3.3K	5%	1/6W
R109	1-249-418-11	CARBON	1.2K	5%	1/6W
R110	1-249-409-11	CARBON	220	5%	1/6W
R111	1-249-409-11	CARBON	220	5%	1/6W
R112	1-249-423-11	CARBON	3.3K	5%	1/6W
R113	1-249-437-11	CARBON	47K	5%	1/6W
R114	1-249-429-11	CARBON	10K	5%	1/6W
R115	1-216-308-00	METAL CHIP	4.7	5%	1/10W
R116	1-216-009-00	METAL CHIP	22	5%	1/10W
R117	1-216-011-00	METAL CHIP	27	5%	1/10W
R118	1-249-405-11	CARBON	100	5%	1/6W
R119	1-249-425-11	CARBON	4.7K	5%	1/6W
R120	1-249-427-11	CARBON	6.8K	5%	1/6W
R121	1-249-421-11	CARBON	2.2K	5%	1/6W
R601	1-249-419-11	CARBON	1.5K	5%	1/6W
R602	1-249-410-11	CARBON	270	5%	1/6W
R603	1-249-419-11	CARBON	1.5K	5%	1/6W
R604	1-249-420-11	CARBON	1.8K	5%	1/6W
R605	1-249-425-11	CARBON	4.7K	5%	1/6W
R701	1-249-429-11	CARBON	10K	5%	1/6W
R702	1-249-421-11	CARBON	2.2K	5%	1/6W
R703	1-249-432-11	CARBON	18K	5%	1/6W
R704	1-249-429-11	CARBON	10K	5%	1/6W
R705	1-249-437-11	CARBON	47K	5%	1/6W
R706	1-249-408-11	CARBON	180	5%	1/6W
R707	1-249-421-11	CARBON	2.2K	5%	1/6W

ELECTRICAL PARTS

Ref.No.	Part No.	Description
R708	1-249-413-11	CARBON 470 5% 1/6W
R709	1-249-437-11	CARBON 47K 5% 1/6W
RV101	1-237-731-11	RES, VAR, CARBON 10K (VOLUME)
RV601	1-230-271-61	RES, ADJ, CARBON 4.7K
RV602	1-230-628-61	RES, ADJ, CARBON 2.2K
S101	1-571-097-11	SWITCH, SLIDE (PB/REC)
S102	1-570-659-31	SWITCH, SLIDE (TAPE SPEED)
S103	1-570-175-11	SWITCH, LEAF (POWER)
S104	1-570-386-11	SWITCH, SLIDE (VOR)
S105	1-570-675-11	SWITCH, SLIDE (PAUSE)
S106	1-554-911-11	SWITCH, LEAF (FF,REW)
SP901	1-503-761-11	SPEAKER
THP601	1-807-762-11	THERMISTOR, POSITIVE

ACCESSORY & PACKING MATERIAL

3-338-738-01	(AEP)....CASE, CARRYING
3-343-906-01	(AEP,E,UK)...SPACER
3-343-912-01	(E,UK)....INDIVIDUAL CARTON
3-343-917-01	(AEP).....INDIVIDUAL CARTON
3-769-276-11	(AEP,E)............MANUAL, INSTRUCTION
3-769-276-21	(US,Canadian,UK)...MANUAL, INSTRUCTION
3-769-276-31	(Canadian).........MANUAL, INSTRUCTION
3-769-276-41	(AEP)..............MANUAL, INSTRUCTION
X-3338-703-1	STRAP ASSY

M-750V

SONY®

SERVICE MANUAL

US Model
Canadian Model
AEP Model
UK Model
E Model

CORRECTION-1

File this correction with the service manual.

☛ : **Corrected portion.**

Page	INCORRECT			CORRECT	
	No.	Part No.	Description	Part No.	Description
9	37	———	———	A-3013-285-A	MECHANISM (MZ-750V-14)

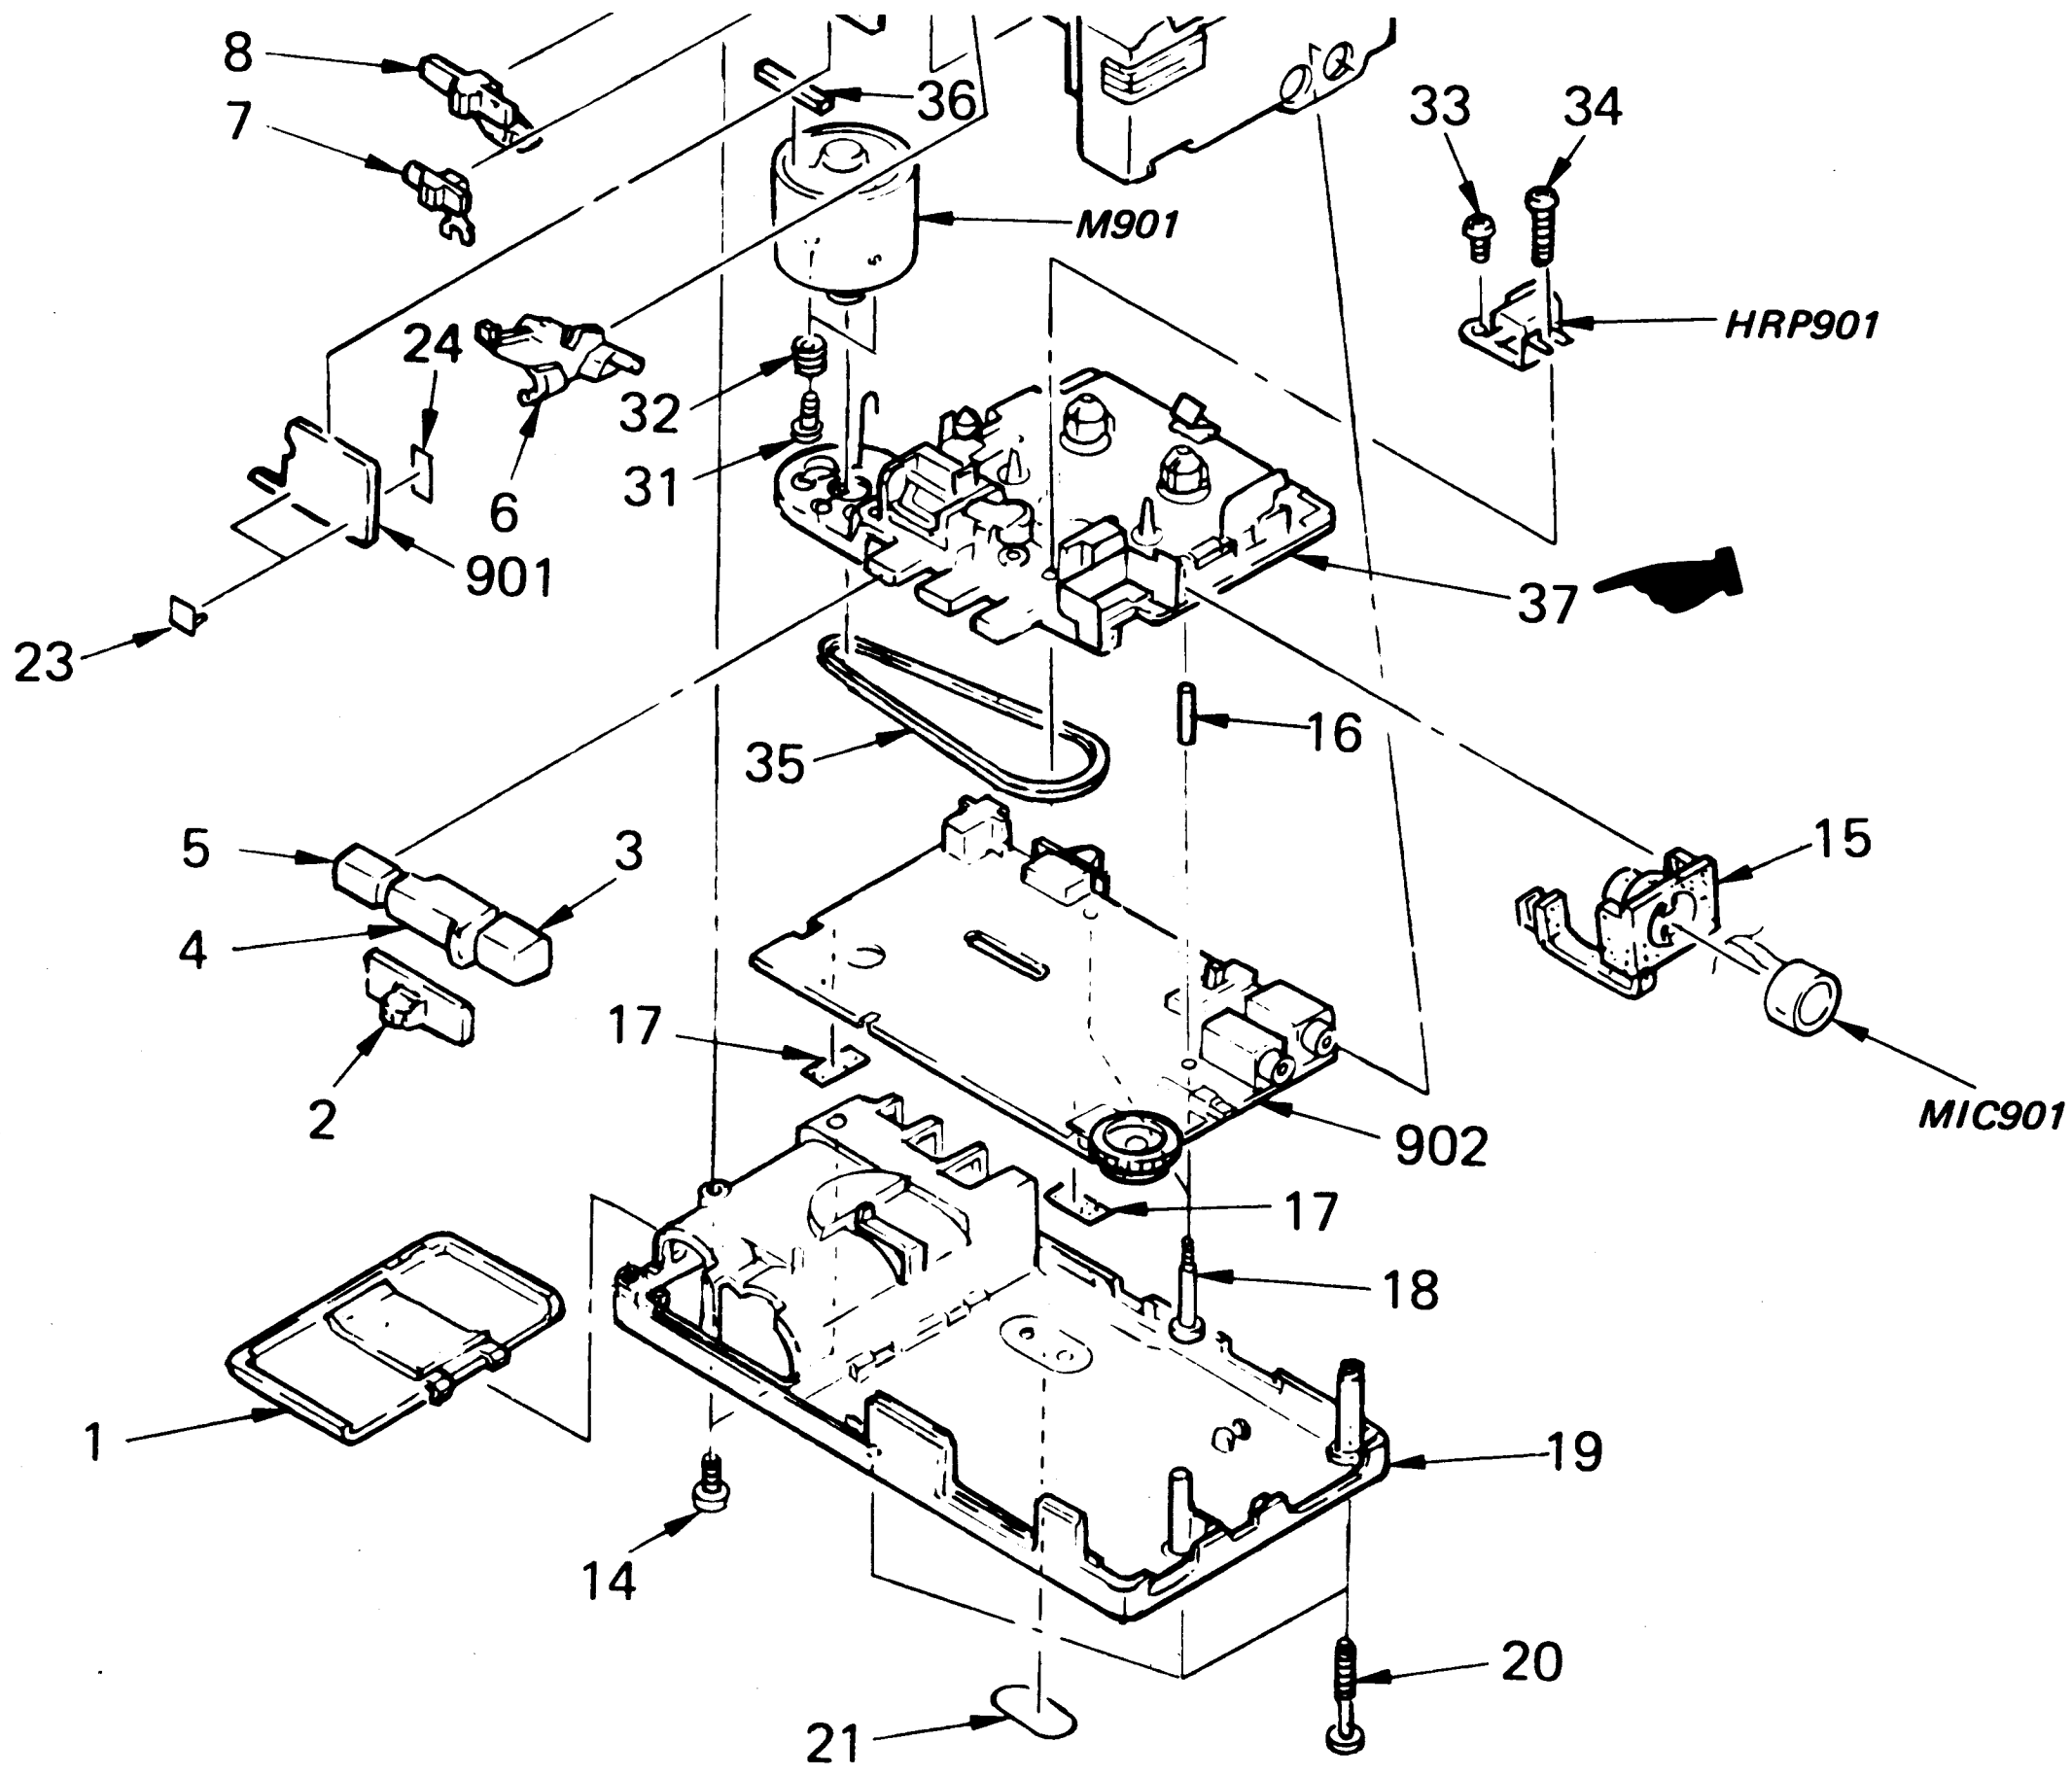

8
7
36
M901
33
34
HRP901
24
32
31
6
901
37 ☛
23
35
16
5
3
4
15
17
2
902
MIC901
17
18
1
19
14
20
21

English
88G0589-1
Printed in Japan
© 1988. 7

9-952-844-91

Sony Corporation
Audio Group

Published by A/V Engineering Service Dept.

⑭